

## LIMITED PRODUCT WARRANTY

Newline warrants its products to be free from defects in material and workmanship for a period of one year from the date of shipment. Any product found to be defective within this time period may be returned to Newline, freight prepaid by buyer, with prior return authorization for repair or replacement at no charge. Any damage on the products which resulted from mishandling, physical abuse, accident, unauthorized service or product abuse will have the warranty voided immediately.

Newline's liability under this warranty is limited to the repair or replacement of the defective product and in no event shall Newline be liable for consequential or indirect damages to equipment or personnel. Nor shall Newline be liable for damages to equipment or personal injury caused by misuse, overload, accidental damage, alteration, improper installation or unauthorized opening of the equipment. Under no circumstances will Newline be responsible for any indirect or consequential damages due to errors in weighing or failure of a Newline product to perform properly.

To request warranty service, please email your claim with invoice # to our Service Department, [service@newlinescale.com](mailto:service@newlinescale.com), to request a RMA #. You can also fill out the RMA form from our web site [www.newlinescale.com](http://www.newlinescale.com)



## SOLAR POWERED BATHROOM SCALE

# INSTRUCTION

For the purpose of proper using & maintaining the scale, please read this instruction completely before operating.



## NewlineNY Solar Powered Scale

Your new electronic personal scale has been designed to accurately indicate you weight gain or loss over a period of time, and should give many years of service under normal use .

### SPECIFICATIONS

- Equipped with a high precision strain gauge sensor system
- Capacity: 180 kg / 400lb
- Graduation : 0.1kg / 0.2lb
- Automatic zero resetting
- Unit switch: kg / lb / st
- Low battery / over-load indicator
- Solar or ambient light powered
- Automatic step on (no need to foot-tap activation before stepping on)


### POWER SUPPLY

- Solar powered, Eco friendly, no battery is needed.
- The NewlineNY Solar Scale draws its power via the integrated solar cells, which are able to quickly gather energy - whether it's being used in a sunny room or one lit by regular household lights.

### OPERATION

**STEP1:** This scale must be operated on flat & solid floor for accurate results. Do not use it on carpet or rugs.

**STEP2:** Step on the scale evenly without moving, the scale will automatically display accurate weight in KG, LB or ST instantly. (No need to foot-tap to turn on the scale).

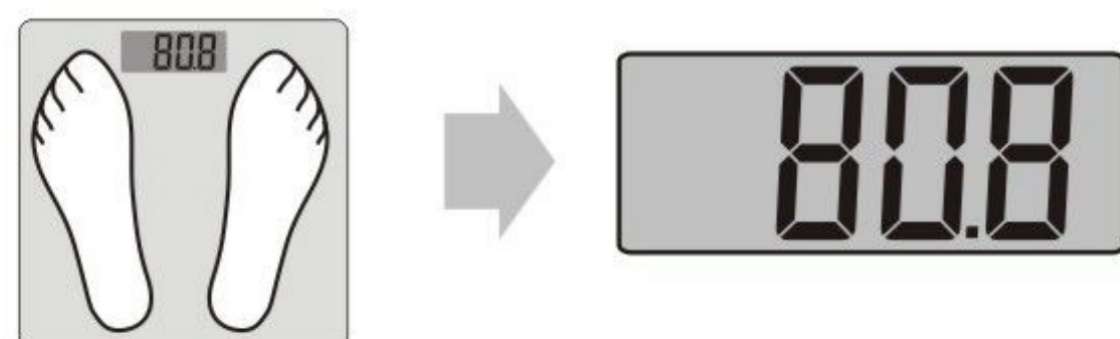


**TIPS:** If you move or pick up the scale, wait 40 to 60 seconds before standing on the scale for accurate weight.

### AUTOMATIC SWITCH OFF

The scale will be switched off automatically after 6 seconds to save energy.

### UNIT SWITCH

The scale by default is set to Kg. Please press the switch button on the back of scale to switch to Lb or St.

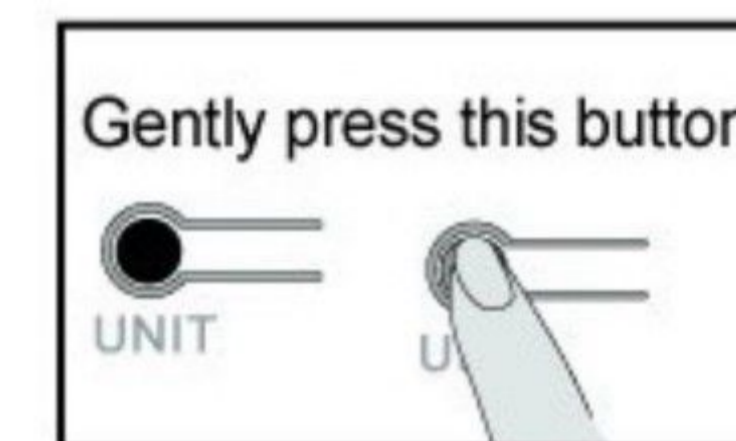

### OVER-LOAD INDICATOR

When the scale is loaded over 180 kgs, the "Err" will be displayed.



### ADVICE FOR USE AND CARE

- The solar scale is powered by sun or household light. For the first time use, please expose the scale to light for 1 minute before standing on it.
- Keep the glass surface dry to prevent slipping.
- Treat the scale with care, as it is a precision instrument. Do not drop or jump on the scale to avoid damaging the sensor.
- Clean the scale with a damp cloth, do not let the water get into the scale. Do not use any chemical to clean it, as it will damage the electronics of the scale.
- Always weigh & place your scale on the same spot.